# **Environmental Protection Agency**

# Horiba Emission Analysis System Curve Verification Procedure

This procedure is written for the Environmental Protection Agency, National Vehicle and Fuel Emissions Laboratory (NVFEL) internal use. The use of specific brand names by NVFEL in this procedure are for reference only and are not an endorsement of those products. This document may be used for guidance by other laboratories.

#### **NVFEL Reference Number**

012A

#### **Implementation Approval**

Original Procedure Authorized by EPCN #234 on 01-29-99

#### **Revision Description**

(1) 09-18-2001 The purpose of this change is to update the Group Responsible name per EPCN #316

**Revision Description** 

### Table of Contents

1.Purpose		4
2.Test Procedure.		4
3.Acceptance Crit	teria	34
	<u>Figures</u>	
Figure 1 MEXA Analyze	er Rack	4
Figure 3 On-Screen Keyl	board	6
Figure 4 Menu Panel for	Linearization Check	<i>6</i>
Figure 5 Analyzer Linear	rization Panel	7
Figure 6 General Parame	ter Setup Panel	7
Figure 7 Standard Gas D	ivider Setup Panel	8
Figure 8 Standard Gas D	ivider Setup Panel for "Cut Points"	8
Figure 9 Cut Points Set P	Panel	9
Figure 10 Standard Gas D	ivider Setup Panel for External Gas	9
Figure 11 Standard Gas D	ivider Setup Panel for Cut Delay	10
Figure 12 Standard Gas Da	ivider Setup Panel for Purge Delay	10
Figure 13 Standard Gas Da	ivider Setup Panel for Cut Delay (Zero)	11
Figure 14 Standard Gas D	ivider Setup Panel for Cut Delay (Span)	11
Figure 15 Standard Gas Da	ivider Setup Panel for "Use Std settings"	12
Figure 16 Standard Gas D	ivider Setup Panel Completion	12
Figure 17 General Parame	ter Setup Panel	13
Figure 18 Standard Curve	Settings Panel	13
Figure 19 Standard Curve	Settings for Weights	14
Figure 20 Standard Curve	Settings to Verify "EPA"	14
Figure 21 Standard Curve	Settings to set "Use Std settings"	15
Figure 22 Standard Curve	Settings Completion	15
=	ter Setup Panel	
Figure 24 Error Criteria Se	ets Panel	16
Figure 25 General Parame	ters Setup Completion	17
•	ter Setup Data Verification	
	rization Panel	
Figure 28 Analyzer Linear	rization to Verify Data	19

# Figures Continued

Figure 29 Parameter Setup Sub-Panel	20
Figure 30 Parameter Setup to Verify "External gas"	20
Figure 31 Parameter Setup to Verify "Top Gas Source"	21
Figure 32 Parameter Setup to Verify "Mid Span Gas Source"	21
Figure 33 Parameter Setup to Verify "Mid Span Gas Source"	22
Figure 34 Parameter Setup Sub-Panel to Select "Time Parameters"	22
Figure 35 Parameter Setup Sub-Panel to Select "Time Parameters"	23
Figure 36 Analyzer Linearization Sub-Panel	22
Figure 37 Analyzer Linearization Sub-Panel	24
Figure 38 Linearization Data Collection Panel	24
Figure 39 Gas Divider Setup Panel	25
Figure 40 Gas Divider Setup to Verify "Gas Divider Setup"	26
Figure 41 Gas Divider Setup to Verify "Gas Divider Setup" Fields	27
Figure 42 Analyzer Calibration Panel	27
Figure 43 Progress Panel	28
Figure 44 Verify "Pass / Fail"	28
Figure 45 Gas Divider Sequence Dialog Box	29
Figure 46 Linearization Data Collection Panel for "Mid Span"	29
Figure 47 Analyzer Mid-Span Check Panel	29
Figure 48 Analyzer Mid Span Check Panel to Verify "Pass / Fail"	30
Figure 49 Horiba Title Bar	30
Figure 50 Analyzer Mid Span Check Sub-Panel	31
Figure 51 Horiba Title Bar	31
Figure 52 Analyzer Linearization Sub-Panel	32
Figure 53 Analyzer Linearization Panel	32
Figure 54 Menu Panel	33
Figure 55 Horiba Title Bar	33

#### 1. Purpose

The purpose of this working practice is to describe the equipment and procedure required to perform a curve verification procedure using the Horiba, Mexa-7000, Automotive Emission Analysis System.

#### 2. Test Procedure

Activate the Horiba Series 7000 Bench according to WP 006, "Horiba Bench Startup." Additional information is also available in the Horiba "Series 7000 Users Guide."

**Note:** If you have an internal gas divider, go to Step 103

- Get the gas divider. Connect the communications cable and all gas lines from the divider to the bench and ensure that the divider is connected to a power outlet.
- 102 Connect the numbered flexible quick-disconnect jumper lines between the MEXA Analyzer Rack (ANR) Gas Divider Panel and the Solenoid Valve Selector (SVS) of the bench under test. See Figure 1.

Line Number	Connection
1	Air
2	O2
3	N2
4	To GDC
5	From GDC



Figure 1 MEXA Analyzer Rack

Ensure that the Gas Divider (GDC) power is turned on. The switch is in the back of the unit.

Go to the gas cylinder storage area outside the control room and, for the analyzer under test, note for later use the value of the bottle concentration on the cylinder label.

See the circle in Figure 2.



Figure 2 Cylinder Label

From the Gas Lab, get a secondary bottle rack containing a bottle with a concentration close to the value noted in Step 104 and bring the secondary bottle rack to the bottle storage area located outside Room 516.

For later use note the value of the bottle concentration on the cylinder tag.

From the secondary bottle rack, select a mid range bottle which should be between 20% - 80% of the range for the curve verification.

For later use note the value of the bottle concentration on the cylinder tag.

- On the Main Control Unit (MCU), command screen, click on the Horiba logo button in the title bar.
- From menu items that appear below the button, click on "User Level."

109 If "Supervisor" is not the top menu item in the display window, click on "Supervisor."

Use the mouse and on-screen keyboard to click on the letters that spell the password and then click on "Enter". See Figure 3.

"Supervisor" will appear at the top-center of the screen.



Figure 3 On-Screen Keyboard

- On the display setup portion of the screen, click on the "Menu" button. From the menu items that appear below the button, click on "Utility."
- At the bottom of the screen, click on the "Checks/Tests" button. See the arrow in Figure 4.

From the menu items that appear, click on "Linearize Check" See the circle in Figure 4.



Figure 4
Menu Panel for Linearization Check

On the "Analyzer Linearization" panel, click on the "General Parameter Setup" button. See the arrow in Figure 5.

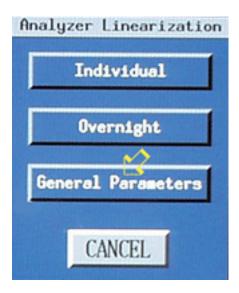


Figure 5
Analyzer Linearization Panel

On the "General Parameter Setup" panel, click on the "Gas Divider Setup" button. See the arrow in Figure 6.

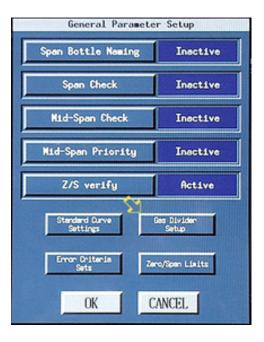


Figure 6
General Parameter Setup Panel

On the "Standard Gas Divider Setup" panel, verify that the field adjacent to the "Divider Type" button is set to "GDC 700." If not, click on "Divider Type." See the arrow in Figure 7. Select "GDC 700" from the menu. See the circle in Figure 7.

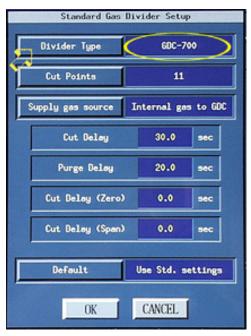


Figure 7
Standard Gas Divider Setup Panel

115 Click on the "Cut Points" button. See the arrow in Figure 8.



Figure 8
Standard Gas Divider Setup Panel for "Cut Points"

On the "Cut Point Set" panel, verify that the default set is selected. The default set is; Cut #1 = 0, Cut #2 = 10.0, Cut #3 = 20.0 and increasing by 10 percent each cut to Cut #11 = 100.0. See the circle in Figure 9.

If the default set is not selected, click on the "Default Set" button. See the arrow in Figure 9. At the bottom of the "Cut Point Set" panel, click on "OK."

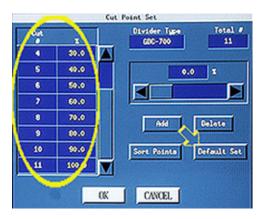


Figure 9
Cut Points Set Panel

On the "Standard Gas Divider Setup" panel, verify that the field adjacent to the "Supply gas source" button is set to "External gas to GDC." If not, click on" Supply gas source." See the arrow in Figure 10. Select "External gas" from the menu. See the circle in Figure 10.

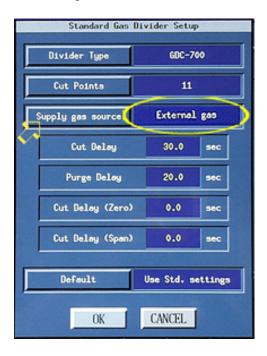


Figure 10 Standard Gas Divider Setup Panel for External Gas

Verify that the field for "Cut Delay" displays "60.0." for NOx and CH4, "30.0" for all other gases. If it doesn't, click in the field and use the on-screen keypad to enter the correct data. See the circle in Figure 11. On the key pad, click on "OK."

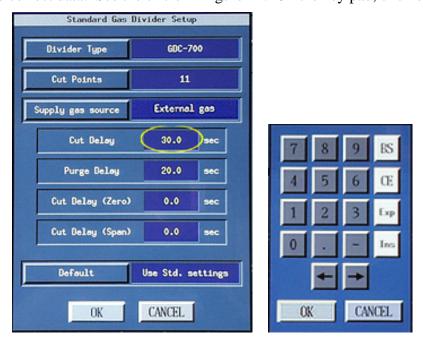


Figure 11 Standard Gas Divider Setup Panel for Cut Delay

Verify that the field for "Purge Delay" displays "30.0." for NOx and CH4, "20.0" for all other gases. If it doesn't, click in the field and use the on-screen keypad to enter the correct data. See the circle Figure 12. On the key pad, click on "OK."



Figure 12 Standard Gas Divider Setup Panel for Purge Delay

Verify that the field for "Cut Delay (Zero)" displays "0.0." If it doesn't, click in the field and use the on-screen keypad to enter the correct data.

See the circle in Figure 13. On the key pad, click on "OK."

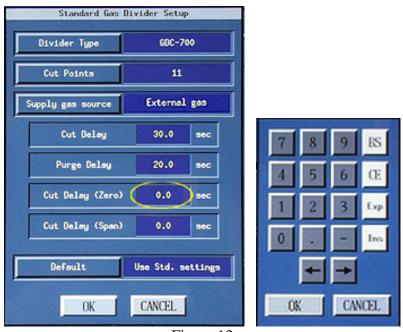


Figure 13 Standard Gas Divider Setup Panel for Cut Delay (Zero)

Verify that the yellow user changeable field for "Cut Delay (Span)" displays "0.0." If it doesn't, click in the field and use the on-screen keypad to enter the correct data. See the circle in Figure 14. On the key pad, click on "OK."

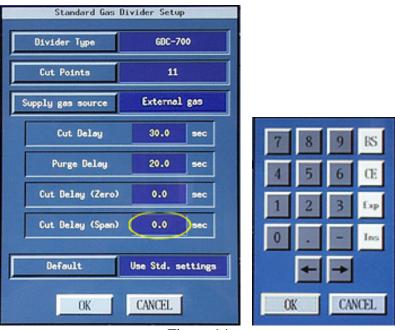


Figure 14 Standard Gas Divider Setup Panel for Cut Delay (Span)

Verify that the field for "Default" is set for "Use Std. settings." If not, click on "Default." See the arrow in Figure 15. Select "Use Std. settings." See the circle in Figure 15.



Figure 15
Standard Gas Divider Setup Panel for "Use Std settings"

123 Click on "OK." See the arrow in Figure 16. The "General Parameter Setup" panel will appear.



Figure 16 Standard Gas Divider Setup Panel Completion

On the "General Parameter Setup" panel, click on the "Standard Curve Settings" button. See the circle in Figure 17.



Figure 17
Select Standard Curve Settings

On the "Standard Curve Settings" panel, Verify that the field for "Curve Order" displays "Auto." If not, click on "Curve Order." See the arrow in Figure 18. Select "Auto." See the circle in Figure 18.



Figure 18 Select Auto

Verify "Weights" in the field for "Fit Criteria." If not, click on "Fit Criteria." See the arrow in Figure 19. Select "Weights." See the circle in Figure 19.



Figure 19 Standard Curve Settings for Weights

Under "Error Criteria," verify that all fields contain "EPA." If not, click on the appropriate button. See the arrows in Figure 20. Select "EPA." See the circle in Figure 20.



Figure 20
Standard Curve Settings to Verify "EPA"

Verify that the field for "Default" displays "on "Use Std. settings." If not, click on "Default." See the arrow in Figure 21. Select "on "Use Std. settings." See the circle in Figure 21.



Figure 21
Standard Curve Settings to set "Use Std settings"

129 Click on "OK." See the arrow in Figure 22. The "General Parameter Setup" panel will appear.



Figure 22 Standard Curve Settings Completion

On the "General Parameter Setup" panel, click on the "Error Criteria Sets" button. See the arrow in Figure 23.



Figure 23 General Parameter Setup Panel

In the scrolling region of the "Error Criteria Sets" panel, ensure that "EPA" is selected. See the circle in Figure 24. Click on "OK." See the arrow in Figure 24. The "General Parameters Setup" panel will appear.

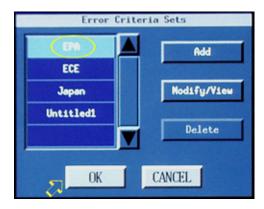


Figure 24 Error Criteria Sets Panel

On the "General Parameters Setup" panel, Verify that the field adjacent to the following buttons are set as follows.

Button Setting

"Span Bottle Naming: "Inactive"

"Span Check" "Inactive"

"Mid-span Check" "Inactive"

"Mid-Span Priority" "Inactive"

"Z/S Verify" "Active"

If not, click on the appropriate button and select the proper setting. Click on "OK." See the arrow in Figure 25.

The "Analyzer Linearization" panel will appear.



Figure 25
General Parameters Setup Completion

On the "Analyzer Linearization" panel, click on the "Individual" button. See the arrow in Figure 26.

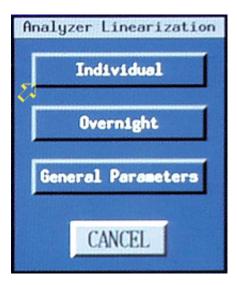


Figure 26
Analyzer Linearization Panel

On the "Analyzer Linearization," sub-panel, verify that the field adjacent to the following buttons are set as follows. See Figure 27.

Button Setting

"Line" The bench under test

"Component" The analyzer under test

"Range" The operating range

If not, click on the appropriate button and select the proper setting. Click on the "Parameter Setup" button. See the arrow in Figure 27.



Figure 27
Analyzer Linearization to Verify Data

On the "Parameter Setup" sub-panel, click on "Gas Source & Concentrations." See the arrow in Figure 28.

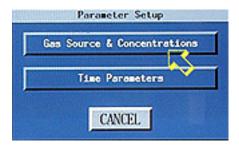


Figure 28 Parameter Setup Sub-Panel

Verify that the field for "Verify Manual Gas Source" displays "External gas." If not, click on "Verify Manual Gas Source." (see the arrow in Figure 29) and then select "External gas." See the circle in Figure 29.



Figure 29
Parameter Setup to Verify "External gas"

Verify that the field for "Top Gas Source" displays "Bottle Label." See the circle in Figure 30. If not, click on "Top Gas Source." See the arrow in Figure 30.

Select "Bottle Label."



Figure 30
Parameter Setup to Verify "Top Gas Source"

For "Top Gas Conc." click in the adjacent field and use the on-screen keypad. See the circle in Figure 31.

Enter the gas concentration value from the label of the secondary bottle noted in Step 105. On the key pad, click on "OK."

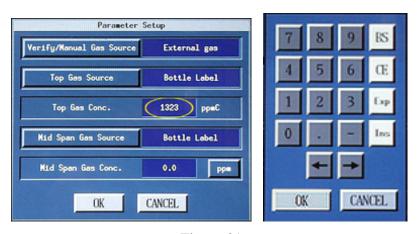


Figure 31
Parameter Setup to set "Top Gas Conc."

Verify that the field for "Mid Span Gas Source" displays "Bottle Label." See the circle in Figure 32. If not, click on "Mid Span Gas Source." See the arrow in Figure 32. Select "Bottle Label."

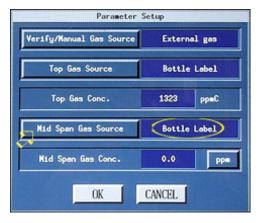


Figure 32
Parameter Setup to Verify "Mid Span Gas Source"

140 For "Mid-span Gas Conc." click in the adjacent field and use the on-screen keypad to enter the gas concentration value from the label of the mid-span bottle noted in Step 106. See circle in Figure 33. On the key pad, click on "OK."

On the "Parameter Setup" panel, click on "OK." See the arrow in Figure 33.

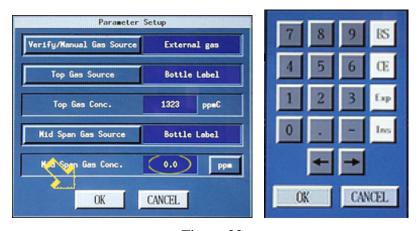


Figure 33
Parameter Setup to Set "Mid Span Gas Conc."

On the smaller "Parameter Setup" sub-panel, click on "Time Parameters." See the arrow in Figure 34.

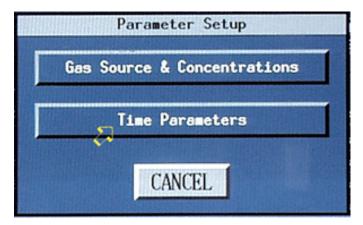


Figure 34
Parameter Setup Sub-Panel to Select "Time Parameters"

For "T1" click in the adjacent field. See the circle in Figure 35. Use the on-screen keypad to enter 30 then click on "OK." See the arrow in Figure 35.

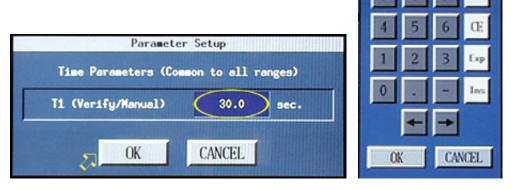


Figure 35
Parameter Setup Sub-Panel to Enter "T1" Value

On the next "Parameter Setup" sub-panel, click on "CANCEL."

- 144 Connect the secondary bottle to the "Bottle" quick-disconnect connector on the SVS panel of the bench under test.
  - Ensure the regulator pressure is set to 13 15 psi.
- On the "Analyzer Linearization" sub-panel, click on the "Collect Candidate Data Set: button. See the arrow in Figure 36.

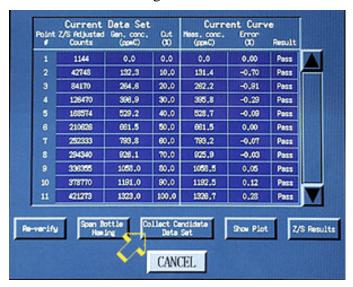


Figure 36
Analyzer Linearization Sub-Panel

On the "Linearization Data Collection Panel," click on the "Collect Data with Gas Divider" Button. See the arrow in Figure 37.

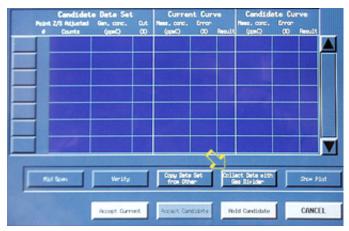


Figure 37
Linearization Data Collection Panel

On the "Gas Divider Setup" panel, verify that the field for "Top Gas" matches the value in Step 138.

If not, use the on-screen alpha-numeric keyboard to enter the correct data. See the circle in Figure 38. On the key pad, click on "OK."

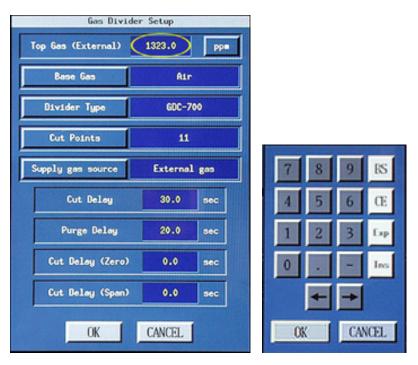


Figure 38 Gas Divider Setup Panel

#### 148 Verify the following settings:

<u>Button</u> <u>Setting</u>

"Divider Type" "GDC 700"

"Cut Points" "11"

"Supply Gas Source" "External gas"

Change an incorrect setting by clicking on the button. See arrows in Figure 39. Select the correct data. See the circles in Figure 39.

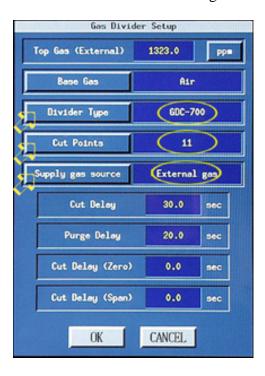


Figure 39
Gas Divider Setup to Verify "Gas Divider Setup"

149 Verify the "Setting" data corresponds for each of the following "Fields":

<u>Field</u>	Setting
"Cut Delay"	60.0 for NOx, 30.0 for all other gases.
"Purge Delay"	30.0 for NOx, 20.0 for all other gases
"Cut Delay (Zero)"	0.0
"Cut Delay (Span)"	0.0

150 Change any incorrect setting by clicking in the appropriate field. See the circles in Figure 40. Using the on-screen alpha-numeric keyboard to enter the correct data. When all entries are correct, click "OK." See the arrow in Figure 40.



Figure 40
Gas Divider Setup to Verify "Gas Divider Setup" Fields

The "Analyzer Calibration" panel will appear. When completed, "Calibration successfully completed" will appear. Click on "OK." See the arrow in Figure 41. The "Interference Check Result Reset" panel will appear.

If "Calibration Failed" appears, the process was not successful. Click on "Restart Cal." and if the calibration fails a second time, notify the senior technician.

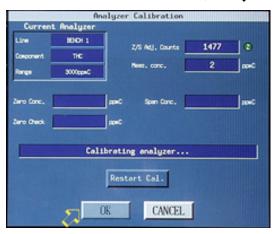


Figure 41 Analyzer Calibration Panel

The test will automatically begin and the progress panel will appear which will automatically update as the test proceeds.

After each point is run, the gas divider will purge and reset. A check will appear in the far left column as each point is completed. See the circle in Figure 42.

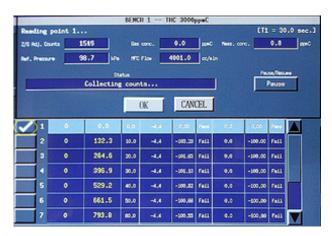


Figure 42 Progress Panel

When all points have run, scroll through the 11 points and verify that the far right column for each displays "Pass" indicating less than 1% of point from the curve.

If any point displays "Fail," go to Step 145 and repeat the procedure a second time.

If any point displays "Fail" after the second try, notify the senior PNGV technician before proceeding.

When all 11 points display "Pass." See the circles in Figure 43. Click on "Accept Data Candidate." See the arrow in Figure 43.

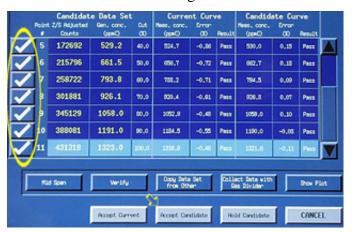


Figure 43 Verify Pass / Fail

When the Gas Divider Sequence dialog box appears with the message "Are you sure you want to accept the candidate curve?", click "OK."

See arrow in Figure 44.

 


Figure 44
Gas Divider Sequence Dialog Box

- 156 Connect the mid-span bottle to the "Bottle" quick-disconnect connector on the SVS panel of the bench under test. Ensure the bottle pressure is set to 13 15 psi.
- On the "Linearization Data Collection" panel, click on the "Mid Span" button. See the arrow in Figure 45.



Figure 45
Linearization Data Collection Panel for "Mid Span"

On the "Analyzer-Mid Span Check" panel, click in the "Mid Span Gas Conc." field. See the circle in Figure 46 Use the on-screen keypad to enter the gas concentration value from the bottle in Step 140. On the keypad, click "OK."

On the Analyzer Mid-Span Check panel, Click on the "Read Counts" button. See the arrow in Figure 46.



Figure 46
Analyzer Mid-Span Check Panel

A sub-panel labeled with the bench number, analyzer in use, and range under test will appear. When the automatic mid-span check is complete the "Analyzer Mid Span Check" will appear and "Pass" should display under "Result." See the circle in Figure 47. If "Fail" appears, Click on the "Read Counts" button again.

If "Fail" appears a second time, notify the senior PNGV technician before proceeding. When "Pass" appears, click on the Horiba logo button on the title bar. See the arrow in Figure 47.



Figure 47
Analyzer Mid Span Check Panel to Verify "Pass / Fail"

160 Click on "Hardcopy." See the circle in Figure 48.



Figure 48 Horiba Title Bar

161 Click on "Sub-panel." See the circle in Figure 49. Click inside the sub-panel. A hardcopy of the sub-panel will print on the control room printer. Retain for attachment to the Analyzer Linearization Data sheet.

On the "Analyzer Mid Span Check" panel, click on "OK." See the arrow in Figure 49.



Figure 49 Analyzer Mid Span Check Sub-Panel

When the "Analyzer Linearization," sub-panel appears, click on the Horiba logo button on the title bar. See the arrow in Figure 50.

Click on "Hardcopy." See the circle in Figure 50.



Figure 50 Horiba Title Bar

163 Click on "Sub-panel." See the circle in Figure 51. Click inside the "Analyzer Linearization" sub-panel. A hardcopy of the sub-panel will print on the control room printer. Staple the hardcopy with the printout from Step 161 and file them in the diagnostics file folder.

Click on "Cancel." See the arrow in Figure 51.

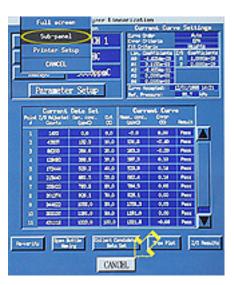


Figure 51 Analyzer Linearization Sub-Panel

On the "Analyzer Linearization," sub-panel, click on "Cancel." See the arrow in Figure 52.

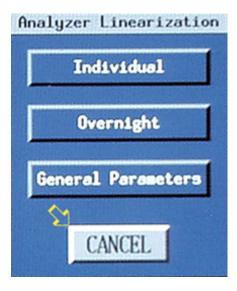


Figure 52 Analyzer Linearization Panel

On the "Supervisor" screen, click on the "Menu" button. See the arrow in Figure 53. Select "Command" from the menu. See the circle in Figure 53.

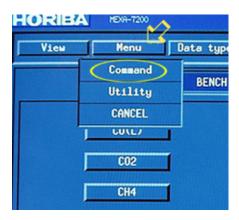


Figure 53 Menu Panel

On the title bar, click on the Horiba logo button See the arrow in Figure 54. Select "User Level" from the menu. See the circle in Figure 54.



Figure 54 Horiba Title Bar

- Disconnect the secondary bottle from the "Bottle" quick-disconnect connector on the SVS panel of the bench and re-connect all lines from the SVS to the gas divider panel.
- Return the secondary bottles to the storage area.

#### 3. Acceptance Criteria

- 3.1 The secondary bottle concentration range should be between 20% 80% of the range for the curve verification and the regulator pressure is set to 13 15 psi.
- 3. 2 The 11 data points in the far right column of the "Progress" panel must display "Pass."
- 3.3 The mid-span check must indicate "Pass" in the display area under "Result" on the "Analyzer Mid Span Check" panel.
- On the "Are you sure you want to accept the candidate curve?" dialog box, the far right column for "Mid" must display "Pass."